

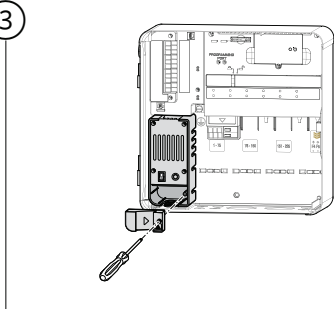
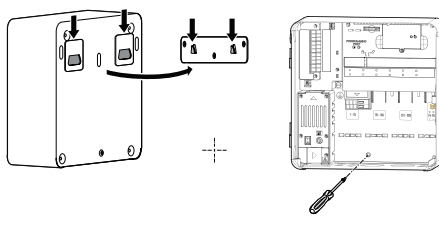
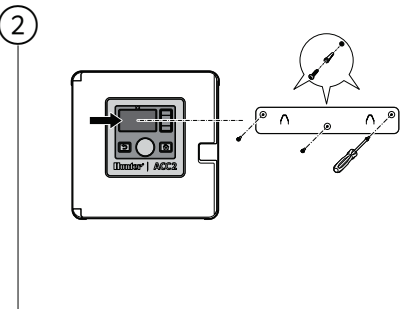


ACC2 DECODER INSTALLATION GUIDE | Hunter®

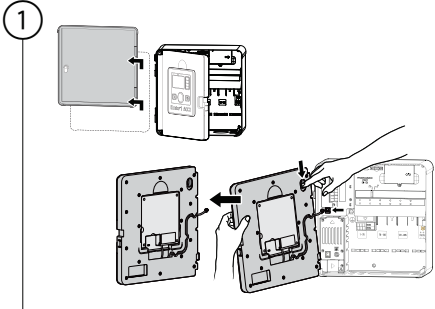

http://hunter.direct/acc2help

hunterindustries.com HC-035-IG-ACC2 DECODER 7/18

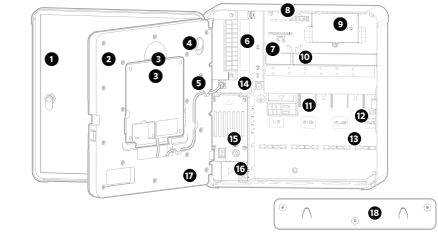

EN CONTROLLER COMPONENTS

- Front Door
- Face Frame
- Facepack
- Face Frame Latch
- Facepack Cable (892700)
- Earth Ground Lug
- Power Supply Board
- Programming Port
- Spare Decoders Fuses and Tool
- PCU Board
- Slide Lock
- Output Module Slots
- Flow Expansion Slot
- Wire Ties for Strain Relief
- Facepack Cable (892700)
- Transformer Assembly
- Wiring Compartment Cover
- Spare Fuse Holders
- Wall Mount Bracket

EN REMOVING FRONT DOOR AND FACE FRAME

- Lift and remove controller front door.
- Disconnect facepack cable.
- Press down on release lever.
- Tilt out face frame and remove.


EN WALL MOUNTING

- Metal pedestal mounting instructions are included with the pedestal hardware.
- BOTTOM of wall bracket is eye-level for center of controller display.
 - Paper template is supplied for marking all anchor holes.
 - Level, mark, and drill anchor holes. Do not forget lower center hole in controller cabinet.
 - Secure wall bracket with supplied or equal hardware.
 - Hang controller on wall bracket with rear hooks.
 - Secure lower center screw from inside the cabinet to complete mounting.


EN WIRING CONTROLLER POWER

- ACC2 may operate with either 120VAC or 230VAC power input. Connections should be made by a licensed electrician. Follow all applicable electrical codes. **CAUTION:** To reduce risk of electric shock, disconnect power before servicing.
- Remove wiring compartment cover.
 - Verify that AC power is off at main circuit breaker.
 - Route incoming AC power wires (minimum 14 AWG/2 mm²) through approved conduit into wiring compartment. Strip wire ends approximately 1/2" / 12 mm.
 - Make AC wiring connections using supplied terminal block or wire nuts and electrical tape, in accordance with local codes.
 - Always cap off or insulate unused hot wire from transformer.

120V-TERMINAL BLOCK

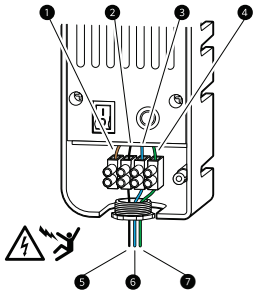

120V-WIRE NUT

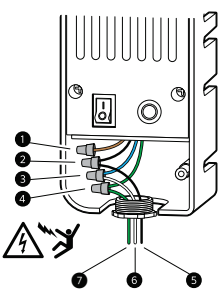

EN 120 VAC CONNECTIONS

Transformer Wire	Power Source
1 Brown	230V (not used) -- --
2 Black	120V Hot 5 Black 120V Hot
3 Blue	Neutral 6 White or Blue 120V Neutral
4 Green or Yellow	Ground 7 Green or Yellow Ground

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد	نوسات 230 فولت تيار متردد	نوسات 120 فولت تيار متردد
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	7

GENERAL SPECIFICATIONS: Input: 115V~, 60Hz, 2.0A or 230~, 50Hz, 1.0A | Output: 24V~, 50/60Hz, 0.8A per station | Total Max Output: 3.0A (incl. master valve) | IP56

